


CMCA Traveller Android Auto Operation

Important notes

- Android Auto cannot be controlled directly from the Android phone.
- Trip Plans are not yet available on Android Auto and are still a work in progress.
- Some Traveller features are not currently available on Android Auto.
- The procedure may vary slightly depending on the navigator type.
- Some vehicles with factory-fitted navigation systems may require the Android phone to be connected via cable to use Android Auto. Please ensure the cable supports file transfer.
- You may need to connect your Android phone to a power source, as Android Auto can use a significant amount of battery.
- Android tablets cannot connect directly to Android Auto.

Procedure

- Turn on Wi-Fi and Bluetooth on your phone.
- Connect the Android Auto navigator device to power and switch it on.
- Under Bluetooth, look for My devices or Other devices, then locate your navigator device (it will usually appear as a model number or code).
- On your phone, tap the navigator device model number.
- Select Pair when prompted. A pairing number will appear.
- Select Allow when asked to allow Contacts and Favourites sync.
- Select Connect when prompted to connect to Android Auto.
- Confirm that the pairing number shown on the phone matches the number displayed on the Android Auto navigator device, then select Connect to Android Auto.
- Depending on the navigator device type, you may need to manually select Android Auto on the screen.
- Place the phone in the centre console or another suitable location where it can receive a GPS signal.
- On the Android Auto navigator device, locate the CMCA Traveller icon.
- Select the icon – Traveller is now active.
- Depending on the navigator device type, select the Search icon on the screen.
- Explore will appear on the Android Auto screen, displaying a menu of POI categories.
- Select a category.
- Use the search function or choose a POI from the category list.

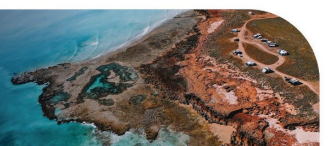

- Select a Route if available.
- Select Navigate — turn-by-turn voice guidance will begin.
- To stop navigation, select the Stop icon (location may vary depending on the device).



Campervan & Motorhome Club of Australia

02 4978 8788 | enquiries@cmca.au | PO Box 254 HRMC NSW 2310

www.cmca.au

